


ASSEMBLING THE SPARLATOR® FAUCET AERATORS


A. START BY DISMANTLING THE EXISTING FAUCET

1. If there is a key handle on the faucet:
use a 22 mm adjustable spanner. If not,
use universal pliers. Do not squeeze the
casing too hard, it might get disfigured and
become difficult to loosen.
2. Make sure that there aren't any remains
of the old gasket adhered to the spout.
3. Open the tap and let the water run for a
few seconds to swill off any existing dirt.

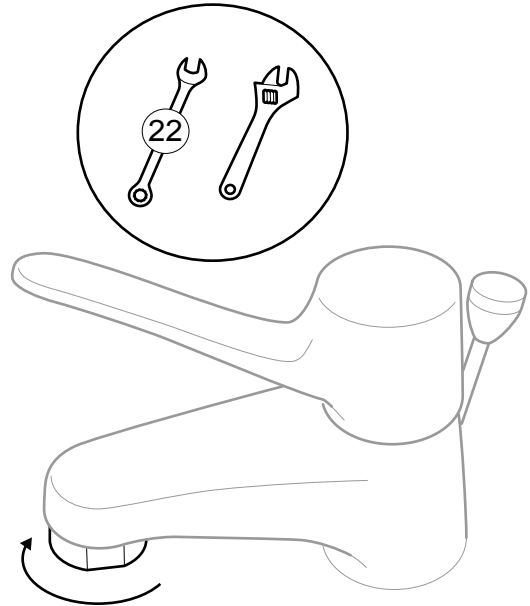

B. ASSEMBLING THE SPARLATOR® FAUCET AERATORS

1. Put the Faucet Aerator in its place and
tighten it manually as much as you can.
2. Open the tap and fasten the Faucet
Aerator with a 22 mm adjustable spanner.
You don't have to tighten it more than 1/4 -
1/2 rounds.

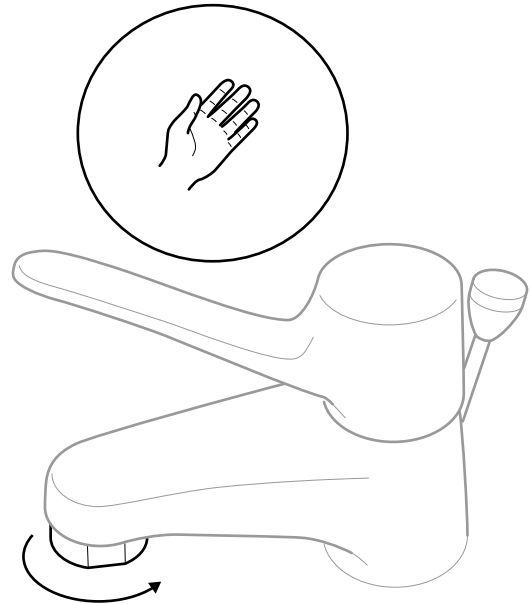

ELLESS 

WATER SAVING SYSTEM

ELLESS Water Saving System AB
Phone: +46 (0) 8 - 600 50 02

Patrick Lundberg
patrick@ewss.se

Stefan Rosén
stefan@ewss.se